
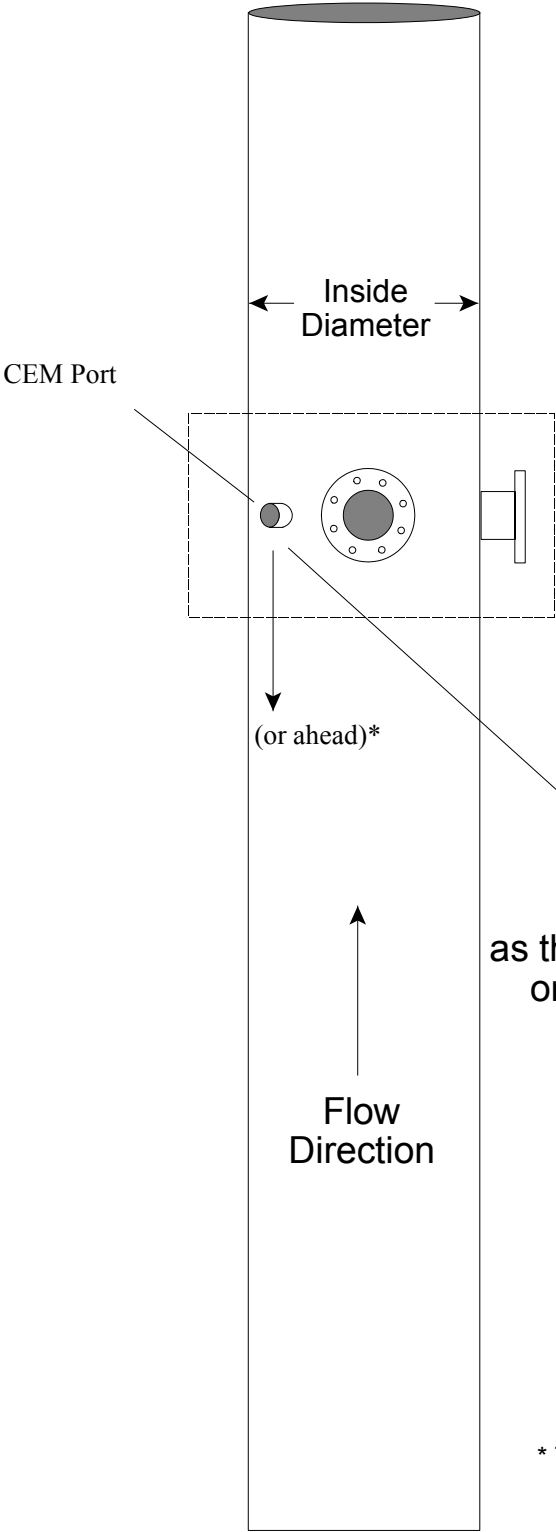


Port Placement

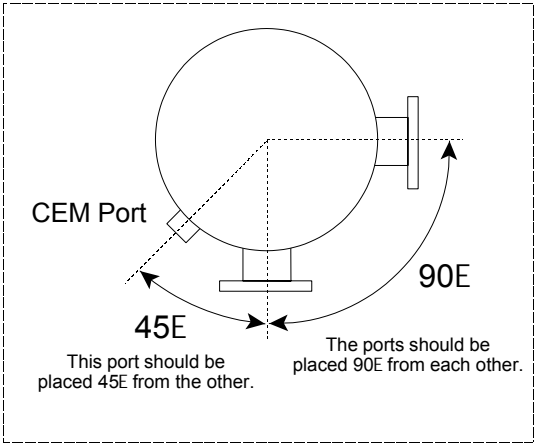

Install 1" ID CEM Port on the same plane as the Method 5 sampling ports (or ahead of them)* on the outside of the two ports, as shown here.

* This is especially important if your source has a significantly negative stack gauge pressure. (ie. the stack pull gas into the port)